


# **TRIGON MODEL 600**

## **APARTMENT ENTRY SYSTEM**

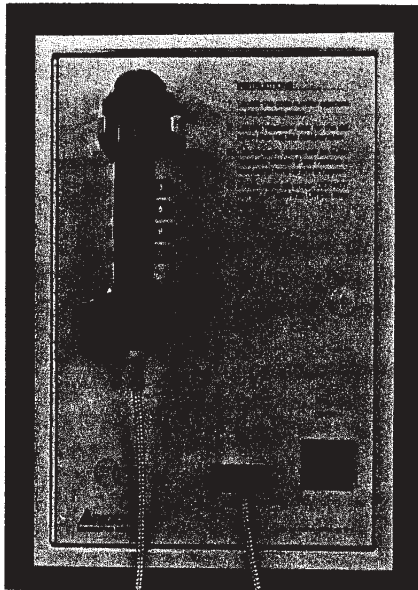

### **MANAGER'S INSTRUCTIONS**

**(READ CAREFULLY BEFORE OPERATING UNIT)**

# **MANAGER'S INSTRUCTIONS TRIGON 600-290 SECURITY ENTRY SYSTEM**

## **GENERAL DESCRIPTION**

The TRIGON Security Entry System consists of a single unit that stores and recalls tenant telephone numbers. When a guest arrives at the security gate, he lifts the receiver and dials the code adjacent to the tenants name on the directory. The unit then automatically dials the telephone number associated with the code. If a tenant wishes to let the guest in, he dials a "5" on his telephone and the security gate will unlock and an indicator marked "OPEN" will light on the unit.

It is important that all the tenants know how the system operates. When a tenant is letting a guest in, both parties must not hang up until the "OPEN" lamp lights and a "beep" is heard on the line.

The unit can also be used as an electronic pushbutton lock. The manager can give out the code to all the tenants or limit the distribution of the combination. A person who wishes to enter lifts the handset and dials a "#" and a four digit combination. If dialed correctly, the gate will unlock.

## **STORING THE TELEPHONE NUMBER**

### **A. ENTERING TENANT'S NUMBER OR CHANGING A NUMBER**

1. Lift the receiver and dial \_\_\_\_\_  
If this code is properly dialed, the unit will display a "C" and a tone will be heard. If not, pull down on the hookswitch and start again.
2. The "C" indicates the unit is ready to accept an apartment code and telephone number.

3. Dial the tenant's two or three digit code. The "C" will extinguish and the tone will stop.
4. Enter the tenant's seven digit telephone number and the "C" will return upon pushing the last digit, indicating the unit is ready to accept the next tenant's telephone number.
5. Repeat steps 3 and 4 until all of the tenants' numbers have been entered. Press and release the hookswitch once to return the unit to normal operation.

### **B. VERIFICATION OF TELEPHONE NUMBERS**

1. Follow the same procedure for entering the telephone number as described in part "A" above, except dial an "\*" and then the tenant's code when the "C" is displayed.
2. The telephone number stored for that code will be flashed one digit at a time on the display.
3. Telephone numbers can now be alternately stored and verified by dialing either the tenant's code or an "\*" and the tenant's code when the "C" is displayed.

### **C. ERASING A TELEPHONE NUMBER**

1. If a tenant has moved or for some reason a code will no longer be used, the telephone number must be erased to prevent calls being made to that number.

2. Perform the same procedure as Part "A" except press an "\*" seven times instead of a telephone number.

#### **D. CORRECTION OF ERRORS WHILE ENTERING NUMBERS**

1. If you realize that you have pressed the wrong apartment code, nothing has changed within the unit until you enter a phone digit so you have the following choices:
  - A. Assign a "no operation" to that code by pressing an "\*" seven times.
  - B. If the code is one that is already being used and you do not want to erase the stored phone number, hang up and start over.
2. If you realize that you have entered an incorrect telephone number just continue entering digits until the "C" is displayed. Then repeat the code and enter the correct phone number.

#### **PUSHBUTTON ENTRY**

- A. Dial the five digit code as described in A-1 of STORING THE TELEPHONE NUMBERS.
- B. Dial the "#" and any four digit number selected at random.
- C. Replace the handset to return the unit to normal operation.
- D. To release the gate, just lift the receiver and dial "#" and the four digit number of Part 2 above and the security gate will unlock.

### **WARNING**

#### **READ CAREFULLY BEFORE USING THIS PROCEDURE**

#### **CLEARING ALL MEMORY**

This procedure should only be used when the unit is first installed or when power has been off long enough for the batteries to discharge (about 10 hours) and the memory to be lost. This procedure clears all the telephone numbers, or any randomly generated numbers caused by power failure from memory. If this is not done, a guest could enter an unused code and dial a wrong telephone number.

- A. Lift the receiver and dial\_\_\_\_\_
- B. If you have dialed the above combination correctly the "C" will be displayed indicating the memory has been cleared and is now ready to accept the first tenant information. You could now enter a code number and a telephone number as shown in Part A-2 of STORING THE PHONE NUMBERS.

### **NOTICE**

#### **FOR SERVICE OR REPAIRS**

**CUSTOMERS SHOULD NOT ATTEMPT REPAIRS.** Such action may violate FCC Regulations. All repairs are to be performed by an authorized representative. Contact nearest dealer or: **TRIGON ELECTRONICS (213) 296-8692 for repair.**