


TRIGON 36

TELEPHONE ENTRY SYSTEM

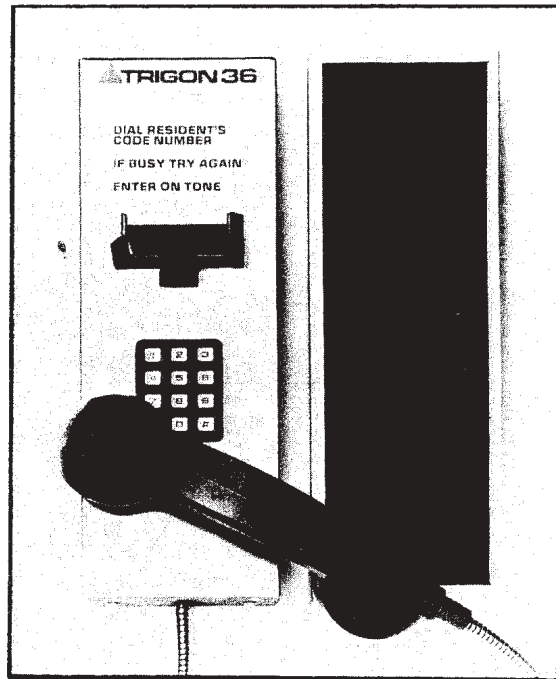

OPERATING INSTRUCTIONS

(READ CAREFULLY BEFORE OPERATING UNIT)

TRIGON
ELECTRONICS, INC.
ORANGE, CA.

OPERATING INSTRUCTIONS TRIGON 36 TELEPHONE ENTRY SYSTEM

GENERAL DESCRIPTION

The TRIGON 36 Telephone Entry System consists of a single unit that stores and recalls resident telephone numbers. When a guest arrives at the secured entrance, he/she lifts the receiver and dials the code adjacent to the resident's name on the directory. The system then automatically dials the telephone number associated with the code. If the resident wishes to let the guest in, they dial or press "5" on their telephone and the secured entrance will unlock and a beeping is heard on the phone line.

It is important that all the residents know how the system operates. When a resident is letting a guest in, both parties must not hang up until the "beeping" is heard on the line.

The system can also be used as an electronic pushbutton lock. The manager can give out the code to all the residents or limit the distribution of the combination. A person who wishes to enter lifts the handset and dials a "#" and a four digit combination. If dialed correctly, the secured entrance will unlock.

STORING THE TELEPHONE NUMBERS

A. ENTERING RESIDENT'S NUMBER OR CHANGING A NUMBER

1. Momentarily depress the receiver switch and dial _____.
If this code is properly dialed, a loud tone will be heard in the ear piece. If not, pull down on the receiver switch and start again.
2. The tone indicates the system is ready to accept a resident's code and telephone number.

3. Dial the resident's two digit code. (Available codes are 00 — 35) The tone will stop.
4. Enter the resident's seven digit telephone number and the tone will return upon pushing the last digit, indicating the system is ready to accept the next resident's code and telephone number.
5. Repeat steps 3 and 4 until all of the resident's numbers have been entered. Press and release the receiver switch once to return the system to normal operation.

B. ERASING A TELEPHONE NUMBER

1. If a resident has moved or for some reason a code will no longer be used, the telephone number must be erased to prevent calls being made to that number.
2. Perform the same procedure as Part "A" except press an "***" seven times instead of a telephone number.

C. CORRECTION OF ERRORS WHILE ENTERING NUMBERS

1. If you realize that you have pressed the wrong resident code, nothing has changed within the system until you enter a phone digit so you have the following choices:
 - A. Assign a "no operation" to that code by pressing an "***" seven times.

- B. If the code is one that is already being used and you do not want to erase the stored phone number, hang up and start over.
- 2. If you realize that you have entered an incorrect telephone number just continue entering digits until the tone is heard. Then repeat the code and enter the correct phone number.

PROGRAMMING THE PUSHBUTTON ENTRY COMBINATION

- A. Dial the five digit code as described in A-1 of STORING THE TELEPHONE NUMBERS.
- B. Dial the “#” and any four digit number selected at random.
- C. Replace the handset to return the unit to normal operation.
- D. To open the secured entrance, just lift the receiver and dial “#” and the four digit number of Part 2 above and the secured entrance will unlock.

WARNING

READ CAREFULLY BEFORE USING THIS PROCEDURE

CLEARING ALL MEMORY

This procedure should only be used when the unit is first installed or when power has been off long enough for the batteries to discharge and the memory to be lost. This procedure clears all the telephone numbers, or any randomly generated numbers caused by power failure. If this is not done, a guest could enter an unused code and dial a wrong telephone number.

- A. Lift the receiver and dial the access code (A-1) plus eleven. (Example: if the code is *1234, you dial *1245).
- B. If you have dialed the above combination correctly no number will dial when any resident code is entered. You are now ready to begin storing telephone numbers.

NOTICE

FOR SERVICE OR REPAIRS

CUSTOMERS SHOULD NOT ATTEMPT REPAIRS. Such action may violate FCC Regulations. All repairs are to be performed by an authorized representative. Contact nearest dealer or: TRIGON ELECTRONICS, INC. (714) 633-7442 for repair.